



1. Bend one lead from the LED light so that it is perpendicular





2. Slide the unbent lead through the hole in the LED base and out the other side of the battery holder

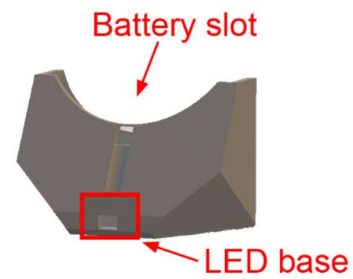

3. Feed the lead that you bent in Step #1 through the hole next to the battery slot

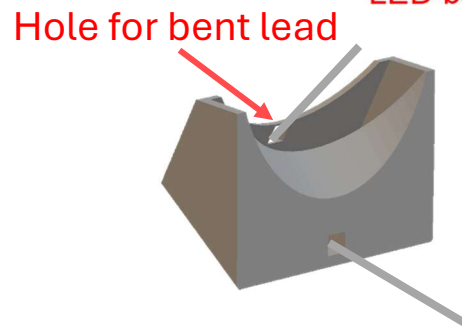

4. Trim excess lead using a wire cutter or flush cutter, leaving enough to bend and tuck the top lead into the battery slot. Repeat this step for the bottom lead, tucking it into the battery slot.

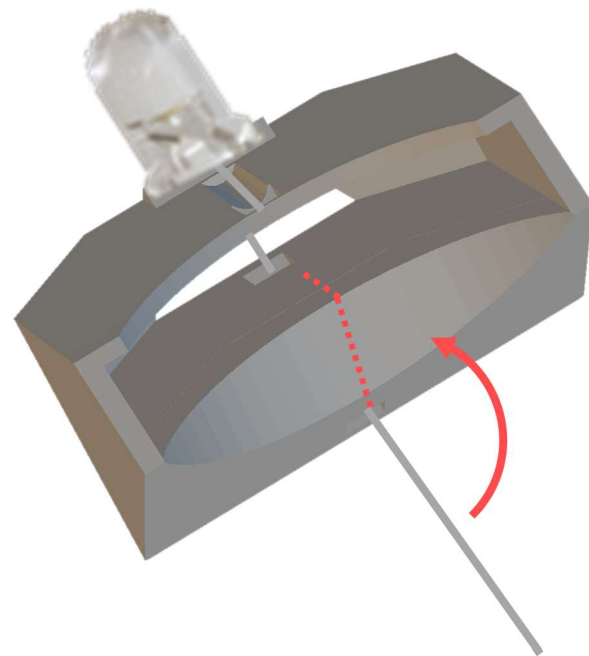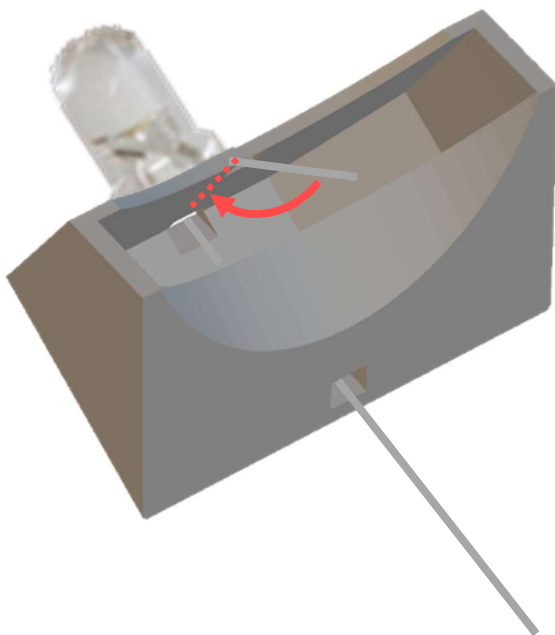

NOTE: Battery orientation is important. If you insert the battery and the LED does not illuminate; remove the battery, flip it over, and reinsert it into the battery slot.